
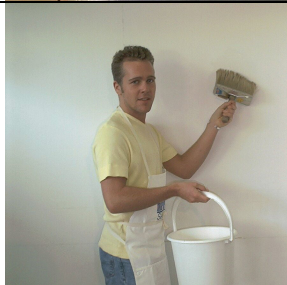
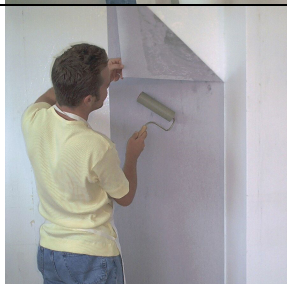





Processing shielding fleece	
	<p>Please cut the fleece to the right size.</p>
	<p>Apply a special adhesive for wall-coverings to the wall (e.g. Henkel Metylan Spezial 200 g in 4 l water with 750 g Ovalit T - admixing)</p>
	<p>Apply the dry fleece to the pasted wall and make sure that it's stuck smoothly to the wall. No air-bubbles shall be left.</p>
	<p>Stick the next sheet of fleece approx. 1 cm overlapping to the last sheet of fleece.</p>
	<p>For the connection to the earth/ ground stick a self adhesive copper tape to the surface of the fleece as soon as the fleece is dry. Connect the copper tape to an earthing wire. If possible use the copper tape once around the room.</p>
	<p>For decoration you can use any wallpaper or wallcovering on top of the shielding fleece. Direct painting is also possible.</p>